

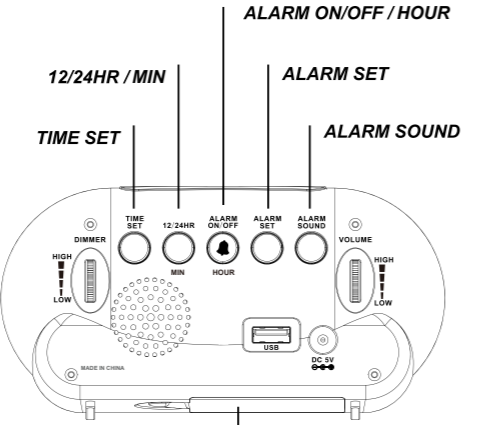
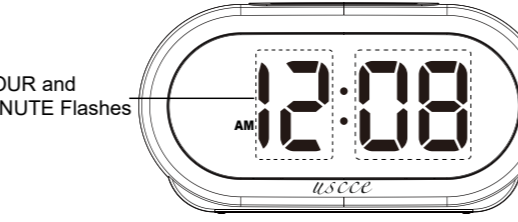

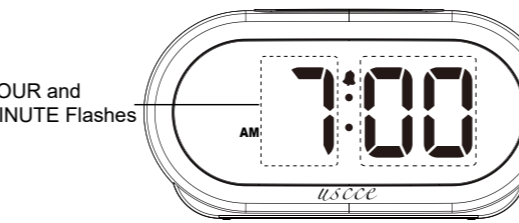


UE128电池普通版美规说明书

| | | | | | | | | | |
|---|--|--|--|--|--|---|---|--|--|
| <p style="text-align: center;"><i>uscce</i></p> <p style="text-align: center;">UE128 User Manual Small Digital Alarm Clock</p>  <p style="text-align: center;">18-month Warranty</p> <p style="text-align: center;">After-sales mailbox: support@uscce.com</p> <p>TIPS: The batteries drains fast(lasting just a few days) if battery operated ONLY. Please keep plugged in!</p> <p>Thank you for purchasing USCCE! Please read this user manual in detail and retain for future reference.</p> | <p style="text-align: center;">PRODUCT OVERVIEW</p>  <p style="text-align: center;">1</p> |  <p style="text-align: center;">2</p> | <p style="text-align: center;">GETTING STARTED</p> <p>Plug the adaptor into a standard household outlet, you will see 12:08 AM on the display and the clock is ready to be set.</p> <p>NOTICE:</p> <ul style="list-style-type: none"> If the display is "blank" after plugging in, please check whether the DIMMER on the back is at the HIGH position. To backup the time and alarm settings in case of power outage, we strongly recommend you to install three AAA alkaline batteries(Not Included) on the bottom of the clock before getting started. <p style="text-align: center;">TIME SETTING</p> <p>1.Press "TIME SET" button to enter time setting, the HOUR and MINUTE digits will flash on the display.</p> <p>Press "ALARM ON/OFF" to advance to the correct hour, and press "12/24HR" to advance to the correct minute (hold for rapid setting).</p>  <p style="text-align: center;">3</p> | <p>2.Press "TIME SET" button again to confirm and exit from Time Setting mode.</p> <p>NOTICE:</p> <ul style="list-style-type: none"> The clock will exit automatically from the Time Setup mode if no action is taken within 10 seconds. (Action refers to pressing the desired button for setup) <p style="text-align: center;">SWITCH TIME FORMAT (12/24HR)</p> <p>Press "12/24HR" to toggle between 12 and 24 hour mode (the default is 12-hour time format).</p> <p>NOTICE:</p> <ul style="list-style-type: none"> When using the 12-hour time format, AM/PM icon will appear to suggest morning/afternoon time. <p style="text-align: center;">ALARM ON/OFF</p>  <ul style="list-style-type: none"> Press the "ALARM ON/OFF", if the alarm icon appears on the display, it means the alarm is on; If the alarm icon disappears, it means completely turn off the alarm and it will not go off. <p style="text-align: center;">4</p> | <p style="text-align: center;">ALARM SETTING</p> <p>1.Press "ALARM SET" button to enter alarm time setting, the HOUR and MINUTE digits will flash on the display.</p> <p>Press "ALARM ON/OFF" to advance to the correct hour, and press "12/24HR" to advance to the correct minute (hold for rapid setting).</p>  <p>HOUR and MINUTE Flashes</p> <p>2.Press "ALARM SET" button again to confirm and exit from Alarm Setting mode.</p> <p>NOTICE:</p> <ul style="list-style-type: none"> The clock will exit automatically from the Alarm Setup mode if no action is taken within 10 seconds. (Action refers to pressing the desired button for setup) The default alarm volume is maximum (90dB). Slide the VOLUME knob at the back of the clock to adjust volume with a range of 30-90dB. <p>To View the Alarm Time: In normal time mode, press and hold "ALARM SET" button for 3s, alarm time will display for 5 seconds.</p> <p style="text-align: center;">5</p> | <p style="text-align: center;">ALARM SOUND SETTING</p> <p>1. Press ALARM SOUND The alarm sound options will flash, and the alarm sound will ring. Press ALARM SOUND repeatedly to choose among five different alarm sound options: 01 =Siren ; 02 = Beep; 03 = Birds Chirping; 04 =Buzzer ; 05 = Soft Music.</p> <p>2. If the alarm sound option, for example "02" , flashes for more than 5 seconds, the alarm sound "02" will be confirmed automatically and exit from Alarm Sound Set Mode.</p> <p>NOTICE:</p> <ul style="list-style-type: none"> Press any button on the back except ALARM SOUND to confirm your alarm sound quickly. If you are a heavy sleeper, it is recommended that you prefer "01"(Siren) as your wake up sound. <p style="text-align: center;">SNOOZE /TURN OFF ALARM DAILY</p> <p>1.When the alarm goes off, press SNOOZE button to snooze for a while, the alarm will go off again 9 minutes later.</p> <p>2.To cancel the snooze at any time or to TURN OFF this day alarm while it is sounding, press any of the five buttons</p> <p style="text-align: center;">6</p> | <p>on the back of the clock. The alarm will go off again at the same time the next day.</p> <p>3.If not stop the alarm, it will last 8mins before going silent.</p> <p style="text-align: center;">BRIGHTNESS SETTING</p> <ul style="list-style-type: none"> Slide the DIMMER knob at the back of the clock to adjust the display brightness. (It can be adjusted from 0 to 100%) <p style="text-align: center;">BATTERY OPEARTED SETTING</p> <p>Install 3* AAA alkaline batteries(Not Included) into Battery Compartment.</p> <p>NOTICE: Under the battery power, clock has all functions except for USB charging your electronic device.</p> <p style="text-align: center;">USB CHARGING PORT</p> <ul style="list-style-type: none"> Connect a USB charging cable to charge your cellphone or other smart device. <p style="text-align: center;">SPECIFICATIONS</p> <p>Power Input: DC, 5V/1A Power: AC, 100-240V (50/60Hz) USB Output: 5V/1A</p> <p style="text-align: center;">7</p> | <p style="text-align: center;">CARE & MAINTENANCE</p> <p>Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep clock away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air. Please remove the batteries when you don't use the clock.</p> <p style="text-align: center;">▲ PLEASE DISPOSE OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS.</p> <p>BATTERY SAFETY: Clean the battery contacts and those of the device prior to battery installation. Remove batteries from equipment no longer using for an extended period. Promptly remove empty batteries from the device. Dispose used batteries properly. Only batteries of the same or equivalent type as recommended are to use. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries(alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.</p> <p style="text-align: center;">8</p> | <p style="text-align: center;">TROUBLESHOOTING</p> <ol style="list-style-type: none"> Alarm doesn't go off at the set time? -check if the alarm is set to AM or PM time; -check if the alarm is turn on (alarm icon display on the screen) Display doesn't light up? -check if the power connection is loosed or not; -change another working outlet to try again; -slide the DIMMER knob to HIGH position in case the display is too dark to see. <p style="text-align: center;">WARRANTY & SUPPORT</p> <ul style="list-style-type: none"> We offer a 45 day money-back guarantee and 18-month free replacement. USCCE customer support is committed to providing you with best-in-class service. For assistance, please keep the model number and order ID number of this product, then contact us by sending email, email address as below: support@uscce.com <p style="text-align: center;">9</p> |
|---|--|--|--|--|--|---|---|--|--|

折页尺寸80X130mm
风琴页折页