


uscce

UE168 User Manual

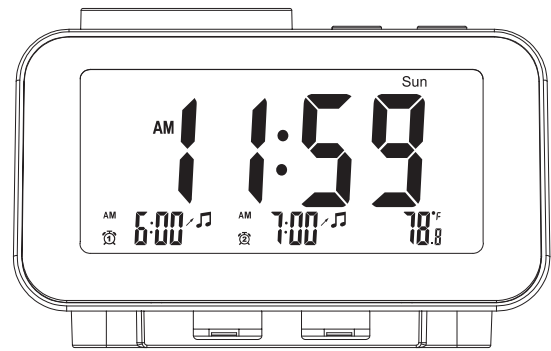

18-month Warranty

After-sales mailbox:

support@uscce.com

Thank you for purchasing USCCE! Please read these instructions carefully before use and retain for future reference.

INSTRUCTIONAL VIDEO


We made a instructional video on YouTube as below link and QR code, just need to scan the code or enter the video link and you can get the Intuitive operation of the alarm clock radio.

Link: <https://youtu.be/UIJyISXU68Y>




1

FRONT VIEW

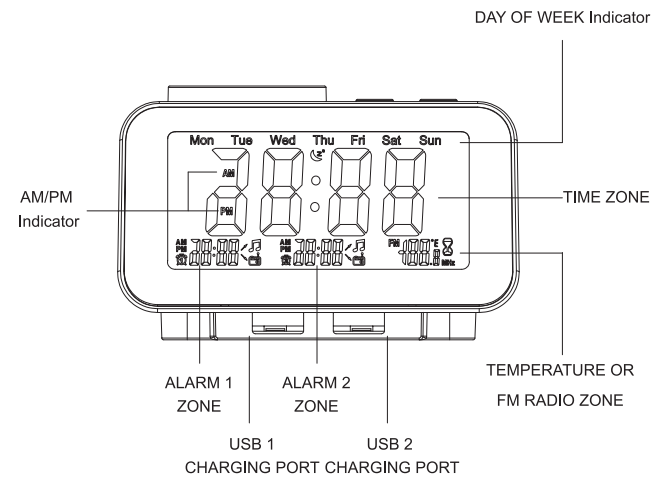


2

BACK VIEW

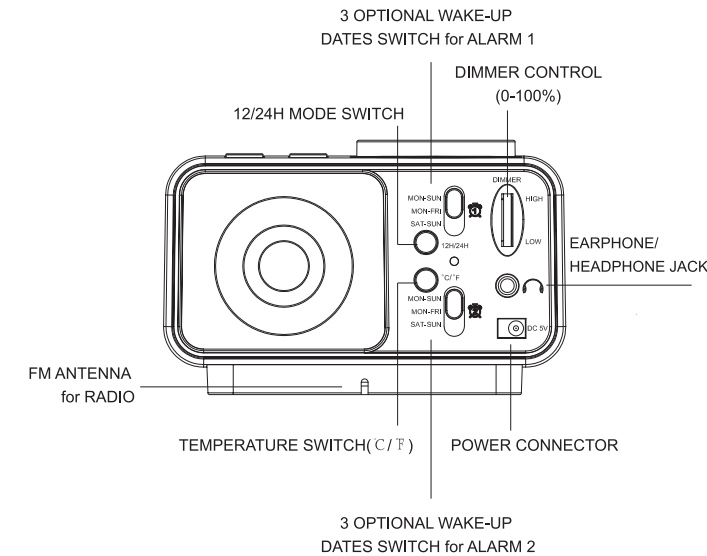

3

TOP VIEW

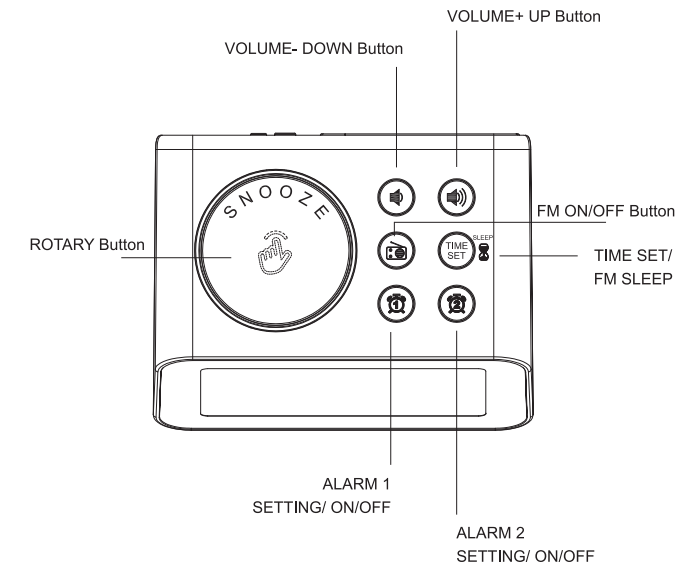

4

BOTTOM VIEW

BATTERY COMPARTMENT



GETTING STARTED


Plug in the adapter into a standard household outlet to get the clock working.

Notice: Please make sure that you plug into the DC 5V power connector, not the headphone jack, otherwise the clock will be blank.



Insert 3 “AAA” batteries(Not Included) to preserve the ALARM, TIME and RADIO settings in case of power interruption.


TIME SETTING



1.Press and hold the “” for 3 seconds to enter HOUR setting. Rotate the “” to adjust hour.

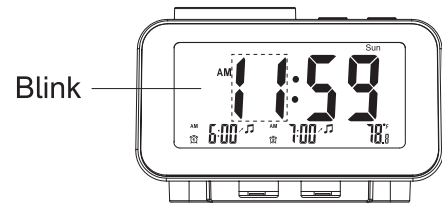


5

2.Press the “” to confirm and enter MINUTE setting. Rotate the “” to adjust minute.

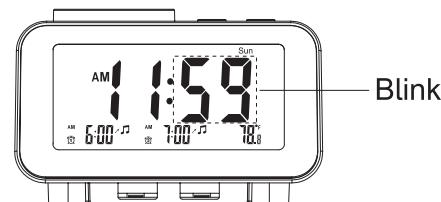

3.Press the “” to confirm and enter DAY OF WEEK setting. Rotate the “” to choose.

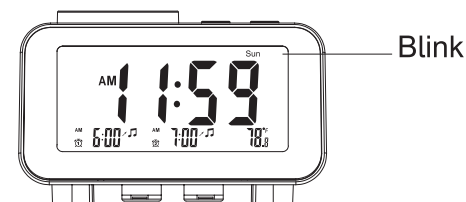

4.Press the “” to confirm and exit from Time Setting Mode.

NOTICE: If digits continue flashing for 10s without any operation, the setting mode will be exited automatically.





6


SWITCH TIME FORMAT (12/24H)

Press 12/24H to toggle between 12 and 24 hour mode (the default is 12-hour time format).


Notice: When using the 12-hour time format, AM/PM icon will appear to suggest morning/afternoon time.

ALARM ON/OFF

Press the “”, If time appears in Alarm Zone of “”, “” is on. If “OFF” is appeared in the Alarm Zone of “”, alarm is off.

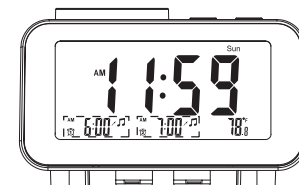


Alarm On

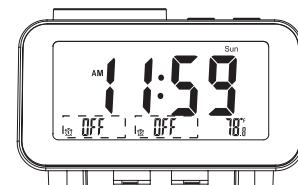




Alarm Off


ALARM.1.2 SETTING (ALARM 1 and ALARM 2 are set in the same way)

7

1.Press and hold the “” for 3 seconds to enter ALARM 1 HOUR setting. Rotate the “” to adjust hour.

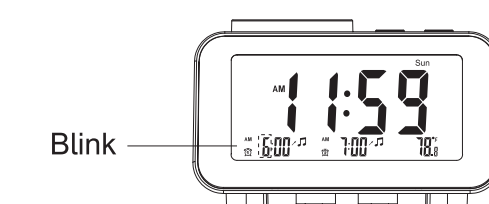



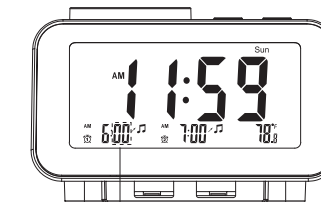
2.Press the “” to confirm and enter MINUTE setting. Rotate the “” to adjust minute.



Blink



8

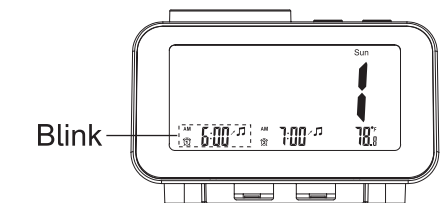3.Press the “” to confirm and enter WAKE UP SOUND setting. Rotate the “” to choose one of five built-in alarm-sounds (1.Beep sounds, 2.Piano sounds, 3.Buzzer, 4.Bird sounds, 5.Soft Music) or “6” for FM radio which is the last tuned in radio station or the station you set in WAKE UP RADIO ALARM SETTING(Page 12)



Blink

4.Press the “” to confirm and exit from Alarm Setting Mode.

Notice: Use the top “” “” to adjust the alarm volume, 1-15 level adjustable. Volume value will appear when you are adjusting volume

9

WAKE-UP DAYS SETTING IN THE BACK

Each of the two alarms have the options for Mon-Sun (Everyday), Mon-Fri (Weekday), Sat-Sun (Weekend).

Slide the “” to set the wake-up days in the back.

NOTICE:

1. Please make sure that you set the correct Day in the **TIME SETTING**;
2. The days setting in the back ONLY enable you to set the alarm for all week long, all weekdays only or weekends only, it means that the alarm can't be set to turn off on certain days only.

SNOOZE/ TURN OFF ALARM DAILY

1. When the alarm goes off, press **SNOOZE** to snooze for a while, the indicator “” will blink, the alarm will go off again 9 minutes later.
2. To cancel the snooze at any time or to **TURN OFF** this day alarm while it is ringing, press “” or “”. The alarm will go off again at the same time the next day.

10

BATTERY OPERATED MODE

Unplug the DC 5V power connector, insert 3*AAA batteries (Not included) into Battery Compartment, then the clock enters into Battery Powered Mode. The screen will show 8 seconds and goes to sleep for saving battery. Press the “” to check your time within 8 seconds.

NOTICE: In Battery Operated Mode, clock has all functions except for USB charging your electronic devices.

DUAL USB CHARGING

The unit is added with two USB output interface for your cellphones or other smart devices charging.

Charging range: 5V/1A-2A

EARPHONE/HEADPHONE JACK SUPPORTED

Use a 3.5mm headphone/earphone to listen to your favorite stations without disturbing other people near you.


15

3. If not stop the alarm, the first 5 built-in alarm-sounds(Beep/ Piano/Buzzer/Bird/Soft Music) will last 15mins before going silent. However, the radio alarm, the 6th alarm sound, are customized. That means when alarm goes off and don't stop it, it'll ring 1 hour before going silent.

FM RADIO SETTING

Please extend the FM antenna on the back of the clock.

1. Press “” every time, FM radio will be ON/OFF.

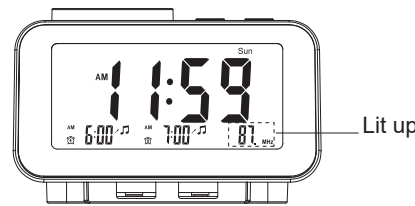

Lit up

11

2. Press and hold “” for 2s when radio is on, FM radio will scan and auto-store the scanned stations. Once the station search is completed, the first station will be played automatically. Rotate the “” to tune from auto-store stations.

TROUBLESHOOTING

1. Is there a way to manually tune the radio? I can not get above 98.3 with the 30 auto-store channels. The stations I listen to are in the hundreds.

Yes, it has two modes: Automatic and Manual. You can save your wanted radio stations via the Manual mode, but Please Note: it only can be saved one stations once in Manual mode.

Here is the operation guide for Manual mode:

* Unplug and remove the battery to reset, set again after power cycle;


* Press “” to enter the FM Mode;

* Rotate “” to manually tune your desired stations. Please extend the FM wire antenna and vary the directions to get the best FM receptions.

2. Can I set the alarm turn off on certain weekdays only?

No, the days setting in the back will be either all-7-day, mon-fri or sat-sun. But you can manually disable the alarm anytime for any certain next day by single pressing the alarm button when it is not ringing. If the alarm is ringing, single press the alarm button will stop the alarm but NOT turning off for tomorrow. And you need to press the alarm button again to turn it off - until you see “OFF” on the screen for that alarm. It can be turned back on by pressing the alarm button again- you will see the “OFF” changes to the alarm setting with time and music (or radio).

16

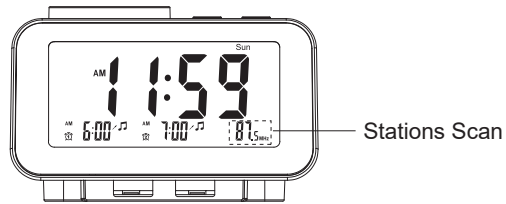


Stations Scan

12

3. Use the top “” “” to adjust the volume of FM radio. 0-15 level adjustable.

WAKE UP RADIO ALARM SETTING

When radio is on, rotate the “” to tune radio stations you like, then press and hold the “” until icon “AL” blinks once on the display screen. The clock immediately saves this station as the 6th Wake Up Radio Alarm Sound.

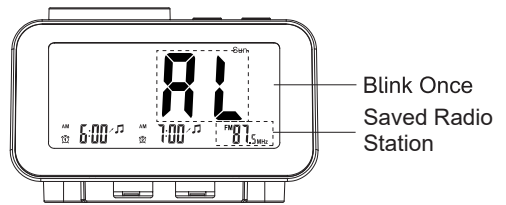

Blink Once
Saved Radio
Station

12

3. Why does the screen blank after 8 seconds? Every time you press the SNOOZE button, it lights up again?

In the Battery Operated Mode, the screen will show 8 seconds and goes to sleep for saving battery. Press the “” to check your time within 8 seconds. The screen will stay on when you plug into the outlet.

4. How can i set the radio station when i choose that as my alarm?How do I change the radio station on the alarm?

Press and hold “alarm 1” until the alarm 1 hour digit blinks, turn the snooze button to set the hour; press “alarm 1” again to confirm and then set minutes the same way; press “alarm 1” again, now the whole display for alarm 1 blinks and a big number appears on the screen. Turn the snooze button until the number is “6”, you will see the music symbol switches “radio” and the station for the alarm also appears at right bottom corner. Press “alarm 1” to confirm.


By default, your last-listened station will be the alarm. If you want to wake up to your favorite station, simply turn the radio to that station, press and hold the snooze button until you see “AL” on the screen. Now you are all set - no matter which station you were listening to before you turn off the radio, your morning alarm will still be the station your set.

17

SLEEP TIMER SETTING

Sleep timer lets you fall asleep while listening to FM radio for the set sleep duration then turns the radio off.

1. When radio is on, press “” once to enter Sleep Timer Setting. Number “150” blinks in Time Zone, rotate “” to select the sleep timer ranging from 10 to 150 minutes.

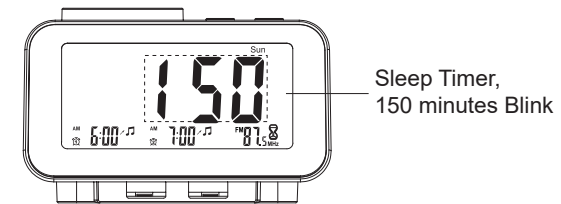

Sleep Timer,
150 minutes Blink

13

2. When the sleep timer is set, please wait for 3 seconds to exit from the setup. The “” indicator will be seen on the right side of the FM radio station.

5. Will the alarm turn off after a certain time?

Yes, when you choose one of five built-in ring tones as your alarm sound, it turns off automatically after 10 minutes if you don't stop it, and when you choose your favorite radio channel as the alarm sound, it turns off automatically after 60 minutes if you don't stop it.


6. How to turn off the alarm completely?

In the normal time display, you can turn the alarm off completely by single pressing the alarm button when it is not ringing - You will see "OFF" on the screen for that alarm. If the alarm is ringing, single press the alarm button will stop the alarm but NOT turning off for tomorrow. And you need press the alarm button again to turn it off - until you see “OFF” on the screen for that alarm. It can be turned back on by pressing the alarm button again- you will see the “OFF” changes to the alarm setting with time and music (or radio).

7. Is the radio volume independent from the radio alarm volume?

Yes, it is. There are two buttons “” “” on top to adjust the volume: when the radio is on it controls the radio volume (with U in front of the number) and when radio is off it controls the radio alarm volume (with L in front of the number).

18

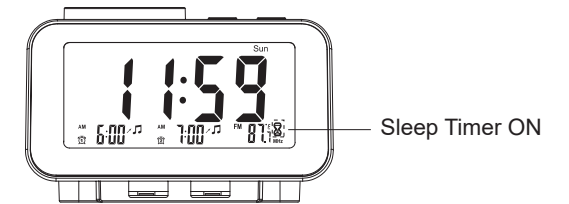

Sleep Timer ON

14

3. To turn off the sleep timer, press “” once and rotate “” to select “00”, and wait for 3 seconds for it to work.

4. When sleep timer is on, press “” once to see the sleep timer remained.

THERMOMETER

Press temperature button(°C/°F) to switch between Celsius and Fahrenheit.

BRIGHTNESS CONTROL

Slide the DIMMER knob at the back of the clock to adjust the display brightness(HIGH:100%, LOW:0%).

WARRANTY

We offer a 45 day money-back gurantee and 18-month free replacement.

SUPPORT

If you encounter any problems with this clock then contact

support@uscceshop.com

where we will deal with your issue within 24 hours.

19